



Manual for Footrest support brace


Step 1 Remove the footrest rail system from the frame.

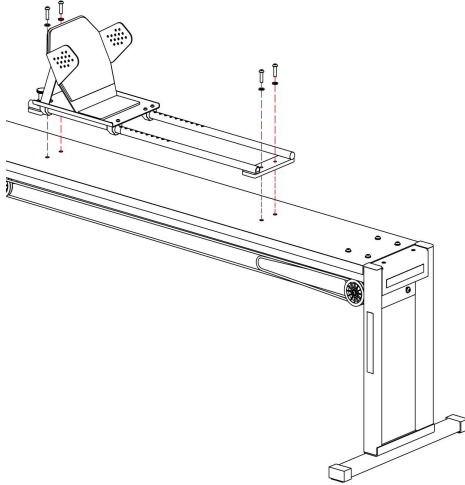


Step 2 Remove the support plate just one end.

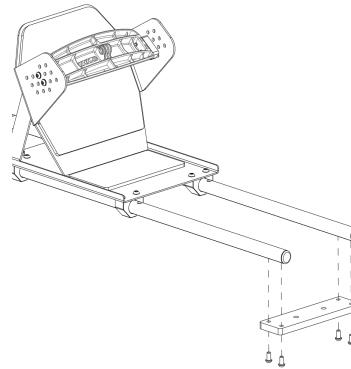

Step 3 Lift Plunger to insert Rails.
Please ensure that the flat surface is aligned with the bottom of the footrest.

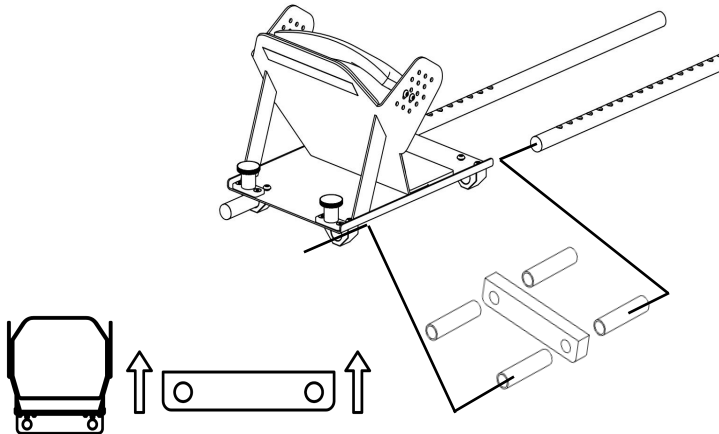

PADDLE WITH US!

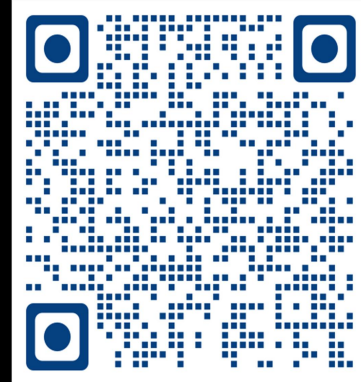

SUBSCRIBE TO OUR YOUTUBE
CHANNEL FOR OUR FREE
KAYAKPRO HD PADDLING VIDEOS!

by **KAYAKPRO**

+1 914 310 5899

sales@kayakpro.com

www.kayakpro.com

1344 Van Buren St., Hollywood Florida 33019.

